

# User manual of JSQ-2 Vibration & Buzzer Receiver

Thanks for choosing our wireless calling transmitter products. In order to be better to use the product, please read this operation instruction carefully.

In some place, the store or shop provide self-service. Each customer gets a number and find a place to wait. When it is his turn, the server will call his number.

In such occasion, there is a 0~9 keyboard calling buttons, press 3 number of them, you can get from 001 to 999 different numbers. Like press 158, you can call the number 158 customer. The customer gets a mini receiver which labeled 158. When there is a call. The receiver will vibrate, he will go to service center and give back the number receiver.

## Technical data

Working frequency: 315MHz/433.92MHz  
 Working voltage: DC3V (AAA x 2)  
 Working current: ≤ 32mA  
 Encoding mode: learning code  
 Working temperature: -10℃~+50℃  
 Product size: 80 × 38 × 15mm

## Pairing



- ① Power ON the switch, in 30 sec, press and hold on the SET button for 6 sec, then the LED indicator will be ON, it enters pairing status.

*Note: if it is over 30 sec after power on, cannot enter pairing status. This is to avoid error operating.*

- ② Then press the button on transmitter, the LED indicator will flicker twice, that means the pairing is finished.

- ③ Power ON the switch, in 30 sec, press and hold on the SET button for 10 sec to delete all the paired transmitters.


## Use Method

For example, use the keyboard transmitter to call different clients or waiters, press button 1, the number 1 receiver will receive the call and vibration/buzzer/light to prompt, press button 122 ...



...

## Diagram

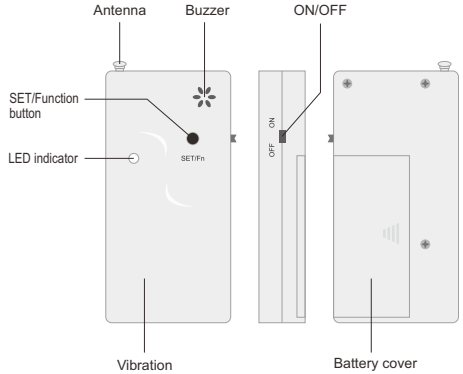

### SET/Function button:

1. Pair the transmitter (Please refer to the pairing at below)
2. Function switch: press for 3 sec to switch the prompt function **vibration/buzzer/vibration+buzzer**

Figure 1

1 2  
3 4


## Prompt Function

When there is call, the receiver will vibrate or sound the buzzer for 5 sec. And the LED indicator will flicker 30 sec, after 30 sec, the LED flicker will be off.

Press and hold on the "SET/Fn" button for 3 sec on the front cover, it will switch "vibration/buzzer/vibration+buzzer" different prompt mode.

## Changing battery

Take out the battery cover to change the battery (AAAx2)

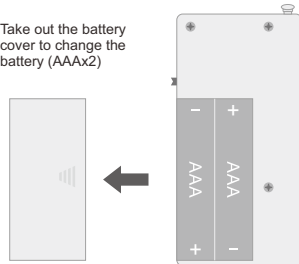

Note: this receiver mostly works with the keyboard calling buttons, to realize the self-service or kitchen calling function. For how to use the keyboard, please refer to its user manual.