CALLING RECEIVER

WATCH WIRELESS



USER MANUAL

In pairing settings, there are 3 pairing mode, "999 mode". "General mode", and "Multi-ID mode".

Pair call button

- 1) 999 mode: the display number only can be selected as
- numbers from 001 to 999 2) General mode: there are 3 digital/letter positions, each
- position can be select from "0~9, A/b/C/d/E/F/H/J/ L/n/o/P/q/S/t/U, -, " characters. You can set number+letter or letter only, like A01, F-9, SOS, etc.
- Press [SET] button to select the position, then press [UP/DOWN] to adjust the value to select a ID number. then press any button on the call button (transmitter), the watch will receive the wireless signal and pair on this number, the standby indicator point will be ON(means
- paired) and jumps to next number automatically.

3) Multi-ID mode: each button on the transmitter can be paired as a call number. For example, 3-button transmitter can be paired 3 times as 3 numbers.

Note: If want 4 digital position defined as letter+number, chose "Multi-ID mode", for example "A-01", "HELP" etc.

Preface

charging circuit.

so on.

Features

· RF wireless technology

999 or letters display

· Accurate time display

· Low-power indication

· Vibration/Buzzer prompt

· Fashionable watch design

· Call button words selectable

· Built-in rechargeable battery

· Call button data pin support for custom

Delete call button 1) List del button: in this mode, all the paired call buttons are showed in the list, you can delete one by one and press

Thanks for chosing callingsys watch receiver, it adopts

wireless technology, digital identify, digital screen and high

stable IC together to realize time display and wireless

calling. The watch uses rechargeable battery and safe

The watch receiver is widely used in restaurants, bars,

cafes, hospitals, hotels, factories, old or disable people and

- [SET] button to delete. 2) Search del button: if there are too many paired call buttons, it is hard to select one. In this mode, press the
 - call button, it jumps to the number, then press [SET] button to delete.

5

3) Del all buttons: in this mode, all the paired button will be deleted.

Charging port (DC5V/1A)

Technical Data

2) Working frequency: 433.92MHz

4) Standby current: 8mA±1mA

5) Power-off current: 180 ± 5µA

7) Decoding: learning code

8) Modulation: AM

Clock

Charging

indicator

Standby

indicator

Diagram

6) Receiving sensitivity: -108dBm

Low power & Charging

When the power capacity icon is close to empty, please charge the battery in time by USB cable.

`2 0;0 8

1) Working voltage: DC3.7V rechargeable Li-poly battery

95mA+10mA (vibration mode)


■ SET/OK

- ∧ Up

∨ Down

Back Power on/off

3) Working current: 99mA±10mA (buzzer mode)

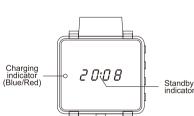

Blue: lower power

Red: charging, when charged full, the light off

SE90 Set default

Settings Diagram

SE10

SE20

SE30

SE40

SE50

SE60

SE70

SE80

Description

General

Pair

Delete

Prompt mode

Display mode

Display order

Auto-clear time

Clock

Submenu

SF11

SE12

SE13

SE14

SE15

SE21

SE22

SE23

SE31

SE32

SE33

2

3

4

SE51

SE52

SE61

SE62

1

no

91

92

Description

Prompt times

OSC resistor

AntiMaliouce

Screen off time

Enhance mode

999 mode

List delete

Search delete

All delete

Vibration

Buzzer

Vibration+Buzzer

Mute

1

Ascendina

Descending

0-180S

Clock setting

Quit

Partial

All set default

Solution

Power on the watch:

Change the battery

Charge the battery

of call buttons

General mode A01~F99

Multi-ID mode 0001~UUUU

Value

01(200-400uS)

02(400-700uS)

01-10 times

01-308


001~999

FAQ

Problem

Screen has no displa-Some call button has less distance

The watch receiver cannot be charged Call buttons cannot be paired

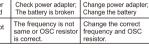


Analysis

Check the bat voltage

Battery of call button

Check the power:

is close to empty

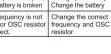

Packing List

- 1) Watch receiver 1pc 2) Power adapter 1pc
- 3) USB cable 1pc 4) User manual 1pc 5) Warranty card
 - 1pc

4

- - 6

- - - 7